

To remove chip, slide a screw driver between the chip and the socket and pry chip loose by rotating the screw driver.

Remove chip and replace with new chip.
NOTE orientation notch!
Be sure that all the pin line up with the socket before pressing chip in.

CPU Card

Red Stripe

