



To exit the tenon software open the MACHINE SETUP menu then touch the screen in the upper left hand corner.

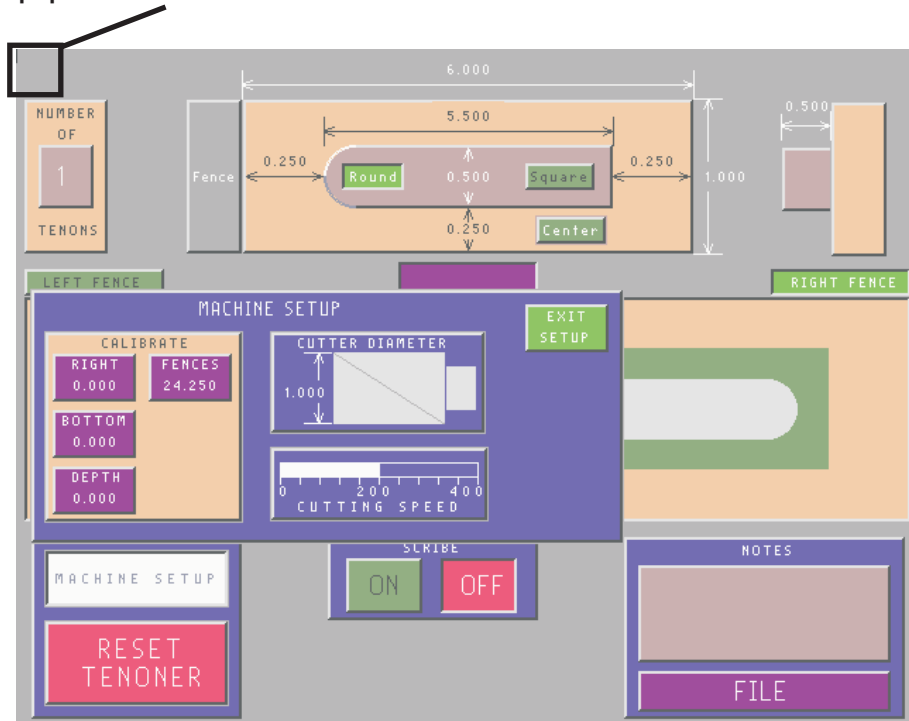

The software should respond with an exit question. Touch the YES to exit.

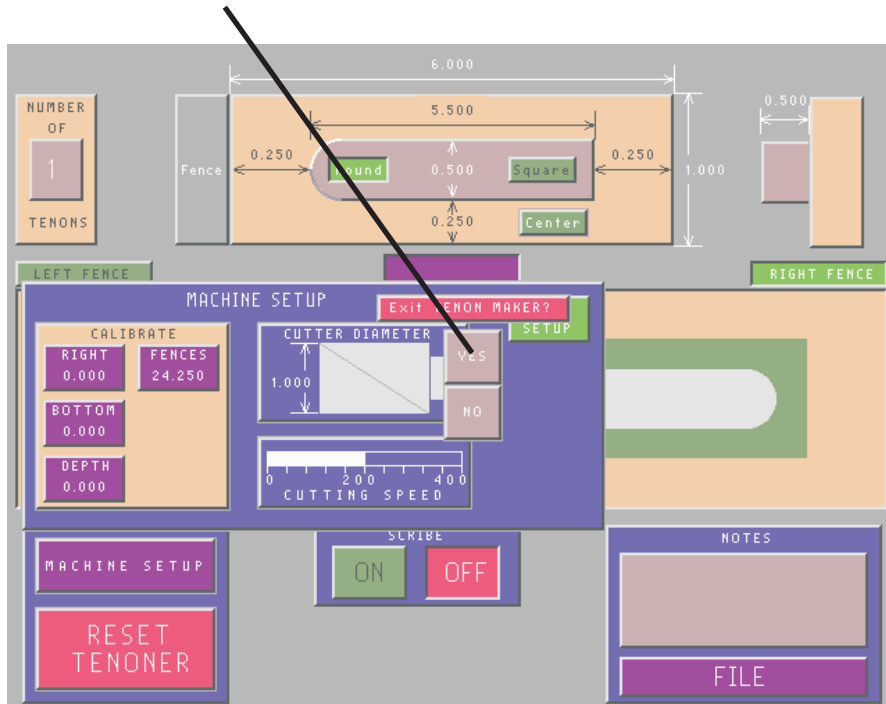

The screen will clear to black with a command prompt in the upper left hand corner.

C:\>