



Removing Flash Drive

First, power down the machine then remove the back of the touch screen cabinet. Then unplug the data and power cables to the floppy drive and remove the three mounting screws. (See first photo)

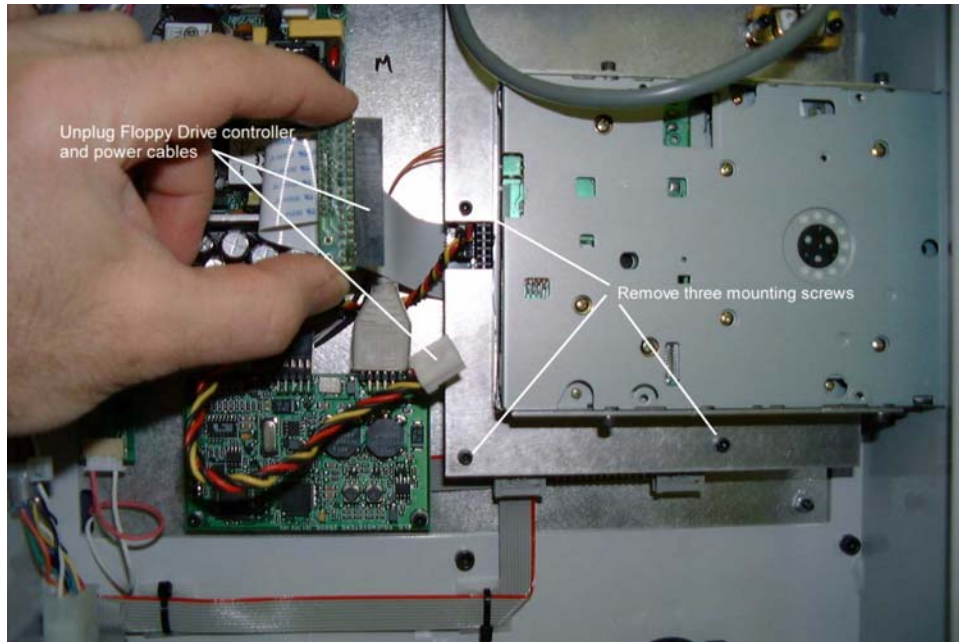

Next, swing the floppy up from the bottom. To do this, you will have to move it left slightly to get it out of the access door hole. (Be care of the CPU power plug in the notch behind the floppy) The serial cable is still attached at this point so you can't remove the floppy drive.

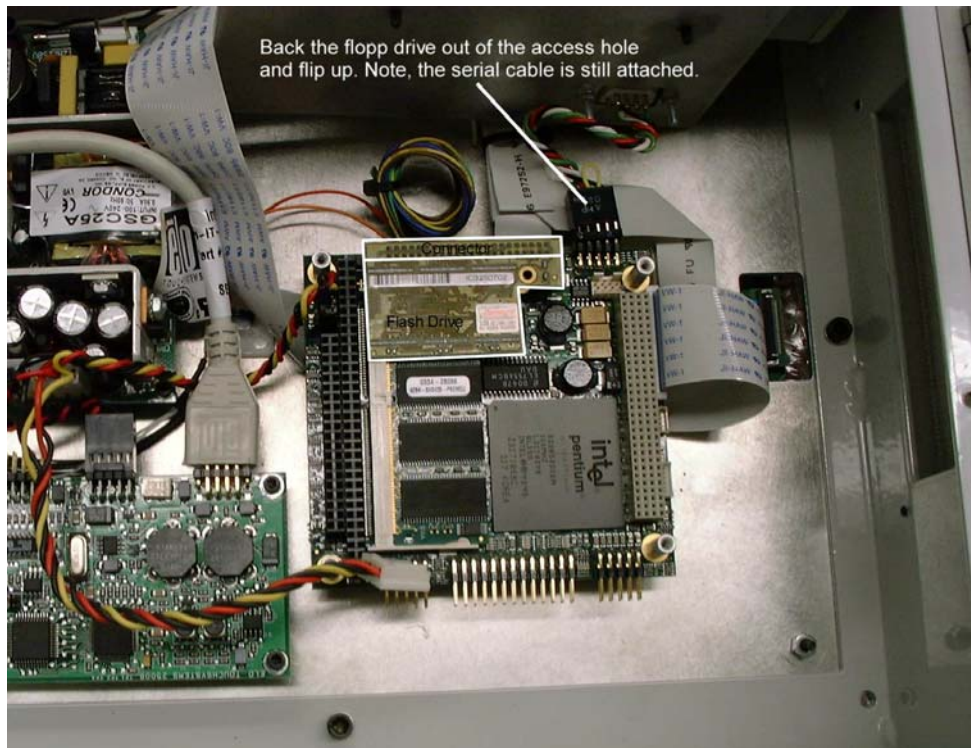

The flash drive is on top off the CPU board and the connector is along the top edge on the back of the flash drive. Carefully pry both ends of the flash drive's connector up in small increments until it releases from the pins. Don't lift one end completely off, it will bend the connector pins.