


I suspect that the color problem with the screen is a loose cable. Unfortunately the cable is behind the floppy drive.

First, power down the machine then remove the back of the touch screen cabinet. Then unplug the data and power cables to the floppy drive and remove the three mounting screws. (See first photo)

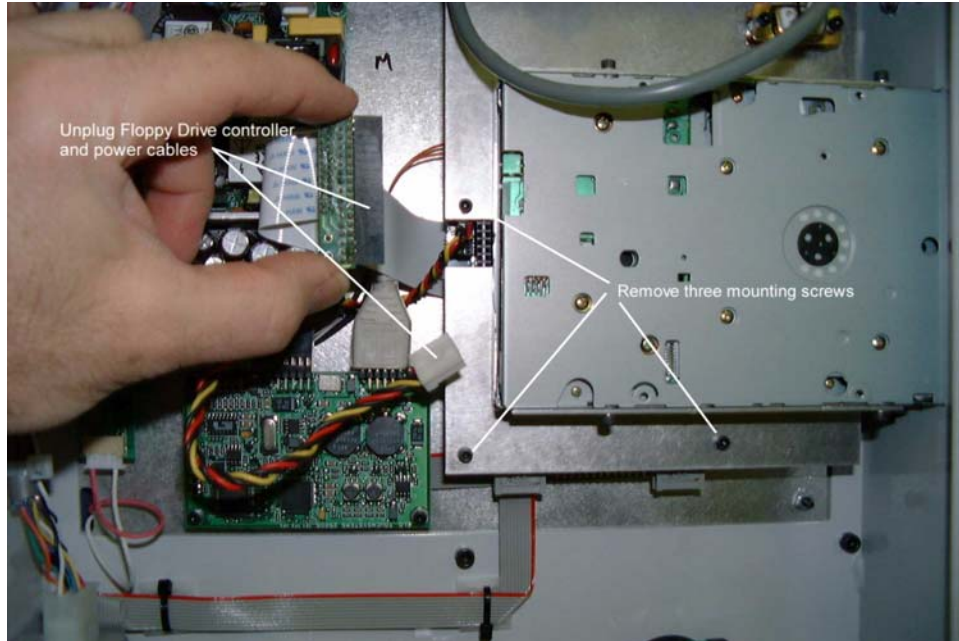

Next, swing the floppy up from the bottom. To do this, you will have to move it left slightly to get it out of the access door hole. (Be care of the CPU power plug in the notch behind the floppy)

The serial cable is still attached at this point so you can't remove the drive. The video cable comes from behind the CPU board and goes through a hole to the LCD screen. (See next photo) This is the suspect cable. You can try just pushing on the connector where it plugs into the LCD. If you want to try to power it up to see if you are successful, you don't have to plug the floppy back in. If you want to lay it back down, you should put at least one screw back in so it doesn't bump into the CPU's power plug.

